

ETG-HLB


HazLoc Low Bay Supplemental Installation Guide

INSTALLING OPTIONAL DOME AND WIRE GUARD



Step 1. From standard fixture with glass lens, remove 8 pcs M4*16 screws holding outer plate and glass lens on

Step 2. Remove outer plate

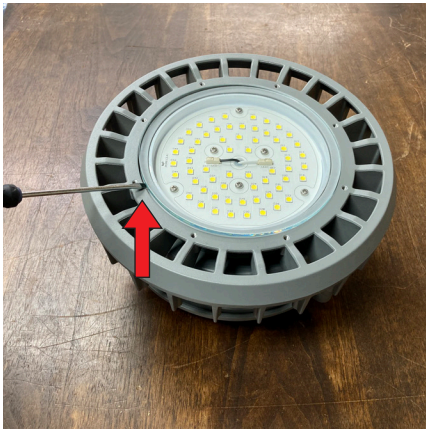


Step 3. Gently pry glass lens off using a flat screwdriver

Step 4. Clean dome lens with alcohol wipe.




Step 5. Carefully place dome lens on top of fixture, making sure lens is centered and laying flat

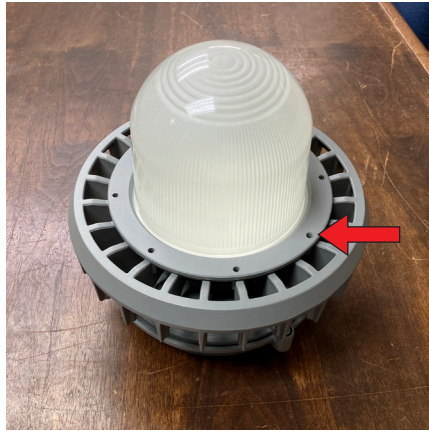

Step 6. Replace outer plate over dome lens, matching up holes with holes on fixture underneath.



Step 7. If also using the dome guard, replace 4 pcs M4*16 screws, leaving one hole empty between each one. Tighten to 1.47 ft lb. **If not using the dome guard, replace all 8 pcs M4*16 screws. Tighten to 1.47 ft lb.**

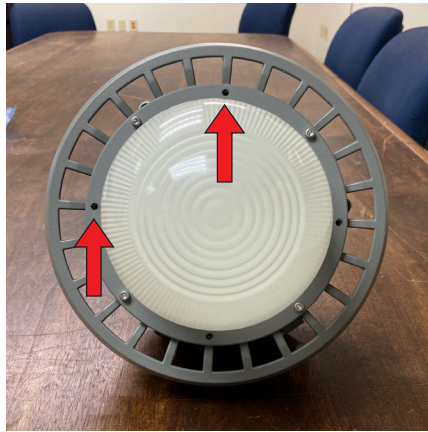

Dome guard



Step 8. If using dome guard, carefully place over dome lens, lining up ends with 'loops' over the 4 empty screw holes.



Step 9. Using the remaining 4 pcs M4*16 screws, 4 pcs small locking washers and 4 pcs larger washers (as shown), secure dome guard by tightening screws into 4 remaining holes. Tighten to 1.47 ft lb.

